



(Infra Red Sensor)



Place Your Hand In Front Of The Sensor <4cm



Delivers 30 - 40 Litres Per Hour Of Chilled Water Below 12°C







- Infra red sensor to enable contact-less dispensing Keep out of direct or reflected sunlight & face away from external doors and windows, to avoid activating the sensor Retains blue dispensing button as a manual option Fitted with a 10 Litre overflow kit Fits our standard cowling and wall bracket
- WRAS approved
- FloodGuard inlet solenoid protects the cooler against large
- scale flooding Impressive 23cm dispensing height

Direct chill cold water cooler

Please read the operating and installation instructions to ensure that the installation site is suitable for contact-less installation



Accessories For The ArcticChill 88 CL

Filter Housing With Carbon Block Candle & Nanofilter.



Installation Rail With Filter. Includes Compression Fitting, 1-Micron Green Filter, Water Block, Copper Pressure Reducing Valve & Non-Return Valve.



Fittied With Our 10 Litre Overflow System With Alarm To Signal When Full.



FloodGuard - Inlet Solenoid Only Opens To Allow Water Into The Cooler, When Water Is Dispensed. By Remaining Closed All Other Times It Protects The Cooler Against Leaks.



Cowling To Fix The Cooler Securely To The Wall (Supplied Separately).



Mains Drainage - Connect The Drip Tray To Mains Drainage. Can Be Supplied With A Pump, To Pump The Water Over 50m & A Rise Of 5m.



Infra red sensor to enable contact-less dispensing

- Green power LED indicates power is on.
- Orange LED will light up during dispensing.
- To activate dispensing place your hand in front of the sensor <4cm.
- Keep out of direct or reflected sunlight & face away from external doors and windows, to avoid activating the sensor

Description	Dimensions H x W x D mm	Weight (Kg)
POU Floor Standing	1135 x 340 x 340	25

Local Distributor



watersystems4u

website: www.watersystems4u.co.uk e-mail: sales@watersystems4u.co.uk Contact: 01727226464 / NI: 028427 38707





www.aafirst.co.uk